

Codabar

Enable/Disable Codabar



Enable Codabar



Disable Codabar

CLSI Editing

Use this parameter to insert a space after the 1st, 5th, and 10th characters of a 14-character Codabar symbol. This symbol length includes start and stop characters.



Enable CLSI Editing



Disable CLSI Editing

NOTIS Editing

This option strips the start and stop characters from decoded Codabar symbols.



Enable NOTIS Editing



Disable NOTIS Editing